SMART DEVICES



AHD/TVI/CVI 2MP Resolution / Amalock Smart Home App 4-wire digital-analog hybrid system

POWERED BY: **tuy**ດົ





DESCRIPTION ON INDOOR MONITOR



Touch Screen Version



Touch Button Version



Monitor Rear View

FUNCTION DESCRIPTION

01	Microphone
02	Speaker
03	TFT-lcd
04	Function Button
05	Operation Button
06	SD card slot
07	AC-IN (90V-240V)
08	DC-IN:12V-15V
09	RJ45
10	Connection for CCTV CAM1
11	Door Station 1
12	Door Station 2
13	Connection for CCTV CAM2
14	OUT, connects to additional monitor
15	Input (Connection for slave monitor)
16	Status Indicator
17	Door 1 status indicator
18	Door 2 status indicator
19	Additional independent unlock/relay output





PANEL ICON FUNCTION DESCRIPTION

Ċ	Status Indicator; Message prompt		
1	Door 1-LED		
2	Door 2-LED		
⊂ (≠) ≠	Transfer calling, internal calling		
<u>ନ</u>	Monitoring		
~~O 🕞	Unlock		
	Independent unlock		
AT 💿 🛷 🕥	Calling, Hang up		
	1: Increase or Up 2: Video Record		
🕸 🐵 🏘	Menu settings		
¥ ∨ v6	1: Reduce or down 2: Capture Picture		

TOUCH SCREEN ICON FUNCTION

6	System settings
0	Device parameter setting
R	Ringtone settings
Ē	Record file playback
	Multimedia playback
C.	Transfer calling
	Additional independent unlock/relay output
Ê	At home mode
ŵ	Not at home mode
C	Sleep mode
	Outdoor units
~	Surveillance camera







AMALOCK Monitor + 2 Outdoor units

















AMALOCK Monitor + 5 Slave Analog monitors + 2 Outdoor units + 2 CCTV Cameras + Router







AMALOCK Monitor + 5 Slave Analog monitors + 2 Outdoor units + 2 CCTV Cameras + Router







SET UP

Default setting: Select language and device ID

	System			
Language	≪	English	⊳	
Device-ID	≪	1	≫	

Please note: The Device ID is an important configuration of the equipment in the system. It must be configured correctly,Otherwise it will not work properly. If the current device is connected to the Outdoor unit 1, it must be set to 1, and the others Slave monitors must be set 2/3/4/5/6 to work normally.



Note: The input video signal must be accurate, otherwise the video signal will not be displayed correctly. If you cannot accurately know the resolution and format of the input signal, you can use the automatic detection function.

cloud services	Unconnected
P address	
MAC	44:01:bb:xx:xx:xx
JUID	*CVBFX02***

EZ mode

EZ mode, only use the mobile phone to connect to WIFI router and match the WIFI password (Monitor does not need to be set), as shown on the next page.





SET UP



Open AMALOCK app and click Add Device.

Select: Video Surveillance > Smart Doorbell.

Choose EZ Mode to match WIFI password; Please be patient, it takes about 40s~60s.





SMART VIDEO ENTRY

SET UP



Precautions

It is better to turn off the data flow when connecting to the network, use WIFI communication, and firstly use WIFI to test whether the network is smooth, the signal is better when above 90%, because the EZ mode uses the broadcast mode, and a strong signal will make the connection easier to succeed.







SET UP



Note: If the connection using EZ mode is unsuccessful, generally there are the following points:

- 1: The total number of road management mail users is generally 16, 32; 128; most of them The number of users is 16, if all users are connected, it will be difficult to reconnect access to this device through EZ broadcast mode.
- 2: The encoding and decoding methods of some older WIFI routers are relatively old and do not support EZ Quick connection In this case.
- 3: If you connect a high-definition WIFI camera to a WIFI router, it will also affect the success rate of the

connection, because high-definition video will take up a lot of bandwidth and cause broadcast interruption during the EZ mode connection, successful configuration will be more difficult. The remedy can be to first suspend the power supply of the WIFI camera, and then resume the power supply of the camera after connection is successful.

4: Do not connect more than two devices at the same time under the same router environment, otherwise they will cross code with each other. You can turn off one of them then connect the other one.





MENU OPERATION INSTRUCTIONS



01	<u>*2°</u> *2°	Red means that the channel status has motion detection turned on, and Grey means that motion detection of this channel is turned off.
02		1: At home mode, normal working state. Will be pushed to the mobile terminal. 2: Not at home mode, directly open the message reminder, visitors can record the message with video. It will also be pushed to the mobile phone. 3: Sleep mode: In door unit and outdoor unit will have no ring,Outdoor will not ring, and it will also be pushed to the mobile phone.
03	* ?	Network connection status indication.
04	¢,	Call log files.
05		No. of message recorded files.
06	<u>همة</u>	No. of motion detected recorded files.
07	<u>ت</u>	No. of alarm log recorded files.

amalock



SMART VIDEO ENTRY

MENU STYLES

2: Android style



3: Standard style



Three styles of display can be set through the menu. No need to restart.







SETTINGS

	~	Enalish	\sim
System Device-ID		1	\sim
Menu style		Win10	\rightarrow
(L) Keytone	\sim	on	\gg
Factory settings	\ll	ok	\gg
Software upgrad	e	ok	\gg
Restart the system	m <	ok	\gg
Formatting SD	\ll	ok	\gg
SD remaining spa	ace	18.6G/128G	\gg
Software version	\ll	V1.01-20201216	\gg
			*
igital Frame			

System

- 1: Please format the SD card with the device and copy the files to the corresponding folder. Please note: it must match the corresponding folder.
- 2: Restore factory settings: All set parameters are restored to factory mode. Note that AMALOCK device must be deleted together before it can be used again, otherwise it can not be added and used by other accounts. Can't connect to the Internet.

Time

- 1: (Screen off): After 10s the system menu be off.
- 2: (Clock): Standby display time.

Digital Frame

- 1: The picture file must be copied to the Digital Frame folder, the picture resolution must not be greater than: 2526x1576, the format is JPEG.
- 2: The digital photo frame function cannot work during motion detection.
- 3: Long press the file to pop up the submenu, select "Delete" or "Delete All", and click the file to enter the playback interface.

amalock



SETTINGS

Devices					
0	Enable switch		on	⊳	
Door 1	Unlock delay	\ll	1	⊳	
	Signal mode	≪(PAL	⊳	
8	Signal type		AHD1080	⊳	
	Record mode	≪(Video	⊳	
Door 2	Message	\ll	off	≫	
2	Motion detection	≪(off	≫	
Camora 1	Detection duration	≪(20s	≫	
Camera 1	Motion display	≪(off	≫	
a	Motion ringtone	≪(off	≫	_
	Detection Push APP	≪1	off	⊳	(←)
Camera 2					

- 1: If the channel is closed, it will be skipped when monitoring the polling screen. This channel and APP will not display this channel. Please set it carefully.
- 2: Motion detection cannot be opened simultaneously with the digital photo frame. Only one of them can be opened.
- 3: When Motion Detection Push APP is OFF, the phone will not receive any push information.

Ring

Door1/Bing?	Schedule	\ll	06:00-12:00	⊳	
	Time	≪(30S	≫	
Door1/Bing7	Ring mode	≪(Standard	≫	
Door1/Rings	Ring select	≪	1	≫	
	Ring volume	≪	8	≫	
	Outdoor volume	\ll	5	≫	
Door ² /Ping2					
					F

- 1: The ringtone of each channel can be set to three time periods, and different ringtone types and volume can be set, but it should, be noted that there can be no gaps in the overlaps between the three time periods, otherwise the system will play the default parameters.
- 2: Please note that the volume setting of the Doorbell cannot be greater than the volume of the indoor unit.

Recording



1: Click the file to play directly, long press the file to enter the delete/read operation.







VIDEO INTERFACE ICON DESCRIPTION



R	Zoom out.
88	Volume, brightness, contrast, saturation adjustment.
Ð	Zoom in.
	Switch to the next channel, Door1>Door2>Cam1>Cam2.
Ô	Snap a picture.
	Snapshot.
A D	Door 1/Door 2 unlock.
	Indoor monitor unlock.
Con so	Calling, Hang up.

amalock



NOTE ON WIRING CONNECTIONS

Please pay attention to the name marked on the sticker of the machine to avoid wrong connection. Wiring requirements

- 1. 4 core ordinary unshielded and shielded wiring cable;
- 2. The effective distance from the outdoor camera to the furthest indoor monitor: Transmission <30m (4x0.4mm) Transmission <60m (4x0.65mm)



 If you want to extend the distance to more than 60m, it is best to choose thick copper core cable, shielded wire or 3-core ordinary unshielded wire + 75-3 video cable. Connect the shield terminal to GND.

Three-wire unshielded cable + SYV75-3 video cable



Integrated video surveillance cable with power cord (2x0.5mm²+75-3)



4 If user wants to use CATS or CAT6 network cable.effective distance from the outdoor camera to the furthest indoor monitor will be limited. For unshielded network cable, the distance will be up to 20m. For shielded network cable, the distance will be up to 40m.

So CATS or CAT6 network cable is not recommended.CATS or CAT6 network cable consists of 4 pairs of twisted pairs(8 wires), here one pair of twisted pair will be used as one cable. Green &White+Green, Brown&White+Brown, Orange&White+Orange, Blue&White+Blue.



If it is a shielded wire, it must be connected to GND.





SMART VIDEO ENTRY

SPECIFICATIONS

Display screen	7" 10.1"
Definition	1024x600x3RGB
Standard	PAL/NTSC
Calling mode	Two-way conversation
Calling time	>1205
Standby current	Max300mA
Work current	Max800mA
Power supply	External switching power Supply <i>(DC12V-15V)</i> -Option Built-in power Supply-Optional
Work temperature	0~+50 C
Installation way	Surface mounting
SD Max capacity	128GB(FAT) >Class10
Video format	AHD/CVI/TVI/CVBS
Resolution	1080P/960P/720P/480P







